



Start:

- Go to Windows Explorer and find the software “Tagmate”
- **Click “Tagmate” to start**
- **Key in S/N Code in Login window**
- **Make sure you put the right S/N Code**
- **Press OK**

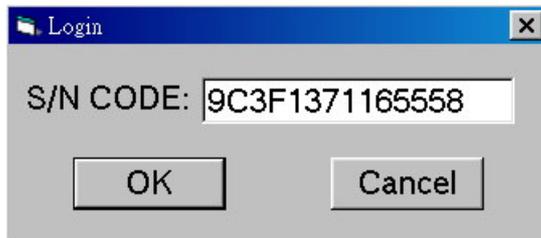

“Tagmate” Page

Function Key choose “mode 2”

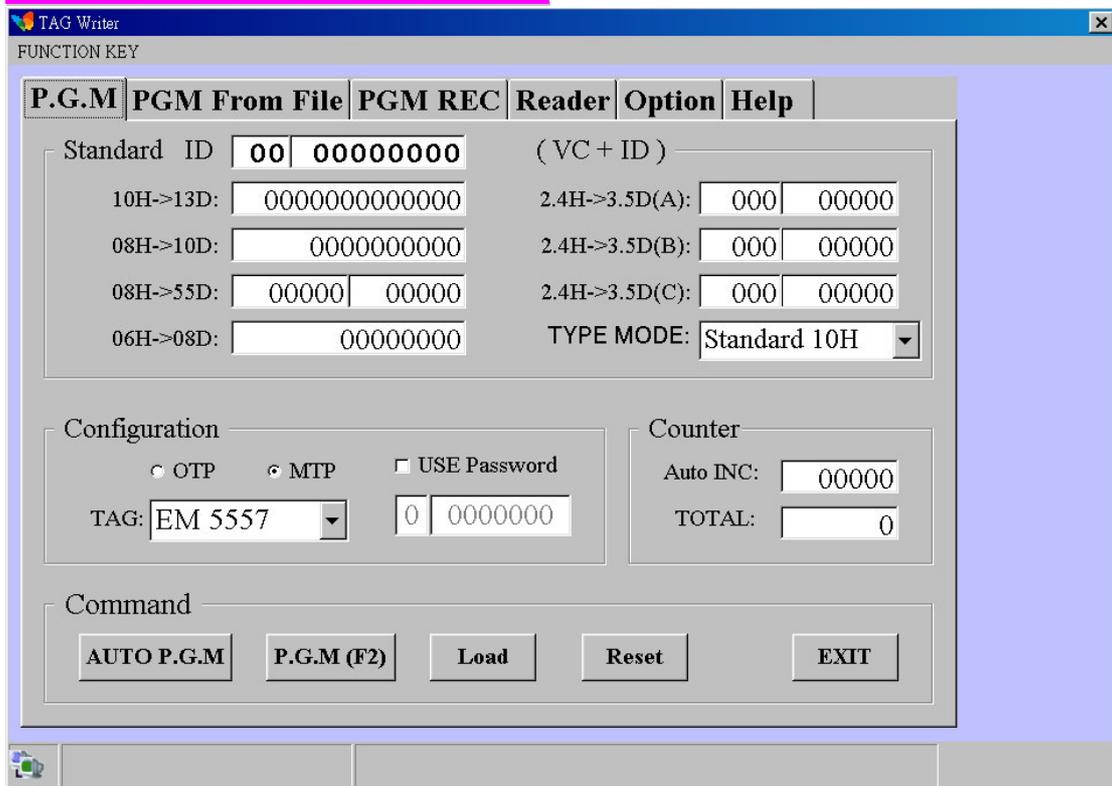

- Check “on line” symbol in the bottom-left side
- Check if RS232 link properly with PC
- The software will find COM Port automatically; you may also choose “COM Port” in “Option”


Encode:

- “Option”
- **Key in encoding parameter**

Program [P.G.M]

Tagmate is the smart software which put both Internal Code and External Code together in the same page.

Key in “S:032 N:016 0:048 1:112”

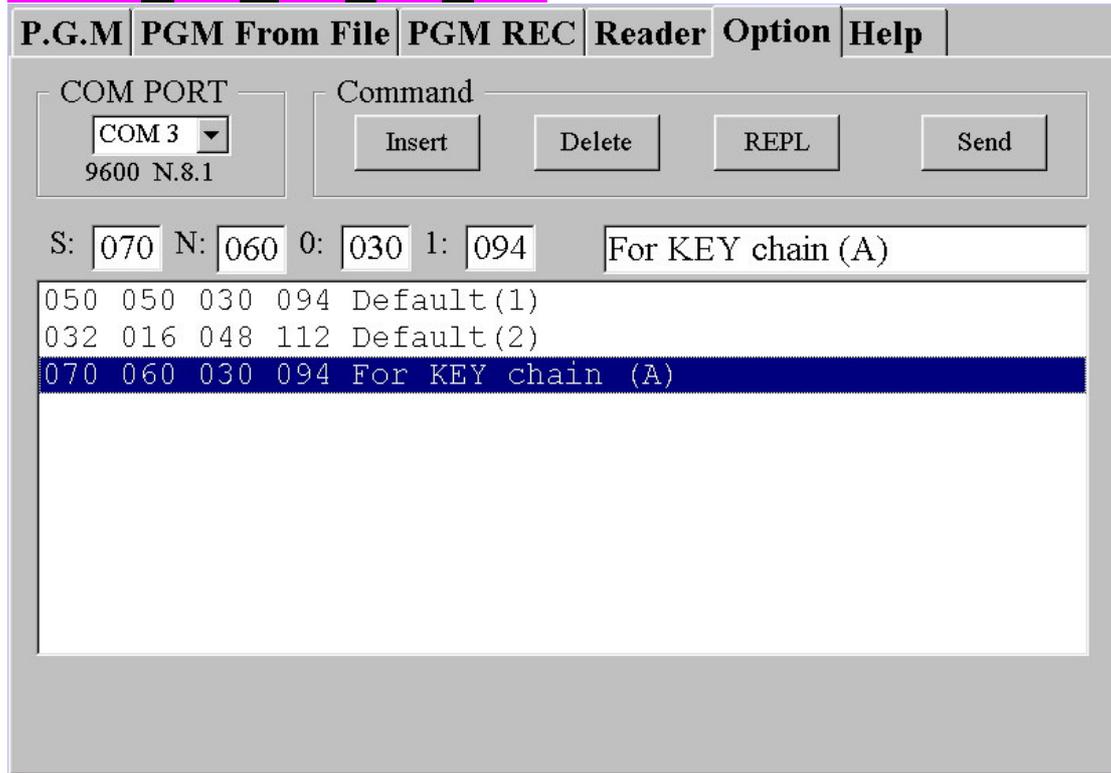

Internal Code : the original code from EM, which recorded on the memory

Include Version code、 Customer code & ID code

Example :

10H: 0F-0153D03A

Version code [V] - 0

Customer code [C] – F

ID code [ID] - 0153D03A

External Code : the code programmed from Internal Code, which printed on the card.

Tagmate support 7 types of External Code as follow:

10H->13D : 0F0153D03A - 0064446779450



08H->10D : 0153D03A - 0022270010



08H->55D : 0153D03A - 00339,53306



06H->08D : 53D03A - 05492794



2.4H->3.5D(A) : 取 VC 碼轉成 3 位 Site Code, ID 最低 4 碼轉成 5 位卡號

2.4H->3.5D(B) : 取 ID 最高 2 碼轉成 3 位 Site Code, ID 最低 4 碼轉成 5 位卡號


2.4H->3.5D(C) : 取 ID 次高 2 碼轉成 3 位 Site Code, ID 最低 4 碼轉成 5 位卡號

- Key in code information in any format block

- Press Load

-Press P.GM

Other function :

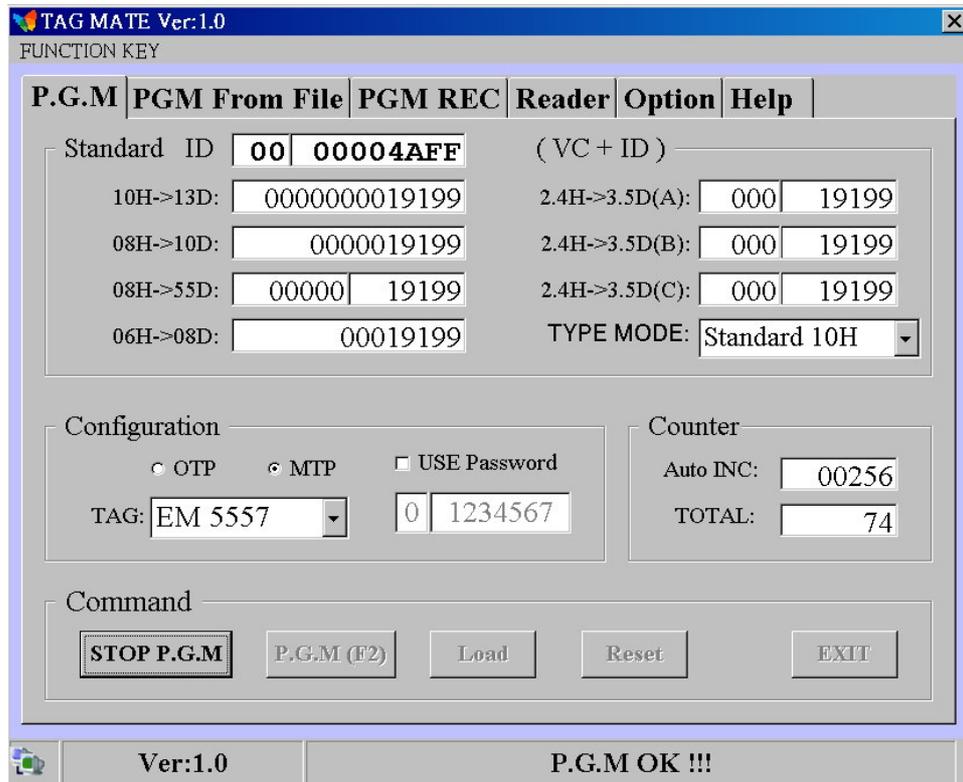

Configuration :

OTP : Lock, the card can't be re-programmed.

MTP : Unlock, the card can be re-programmed.

Use Password : Key in Password before programming, this password need to be provided by card supplier.

TAG : Only support TEMIC E5557.

Counter :

Auto INC : Automatic serial number Hexadecimal programming.

TOTAL : Time of Auto INC.

Command :

AUTO P.G.M - Automatic programming function, put the card close to the encoding area, Tagmate will detect the card automatically

If there is no card on the detecting area, Tagmate will show up "Waiting" message.

PGM OK - means program successfully.

STOP P.G.M – stop programming automatically.

P.G.M(F2) – Single programming

LOAD – Exchanging internal code and external code.

RESET – Reset

EXIT – Exit from Tagmate System

PGM From File

P.G.M	PGM From File	PGM REC	Reader	Option	Help
ID Show Model:		Standard 10H	00000		
00001	#00-00000000	---	H00-00000000		
00002	#00-00000001	---	H00-00000001		
00003	#00-00000002	---	H00-00000002		
00004	#00-00000003	---	H00-00000003		
00005	#00-00000004	---	H00-00000004		
00006	#00-00000005	---	H00-00000005		
00007	#00-00000006	---	H00-00000006		
00008	#00-00000007	---	H00-00000007		
00009	#00-00000008	---	H00-00000008		
00010	#00-00000009	---	H00-00000009		

Command

Open

P.G.M (F5)

Delete

Clear


- Open the file
- Press P.G.M or F5 for programming
- Delete the card
- Clear the data

PGM REC

Save – Save the data

Delete – Delete the data

Clear – Clear the data

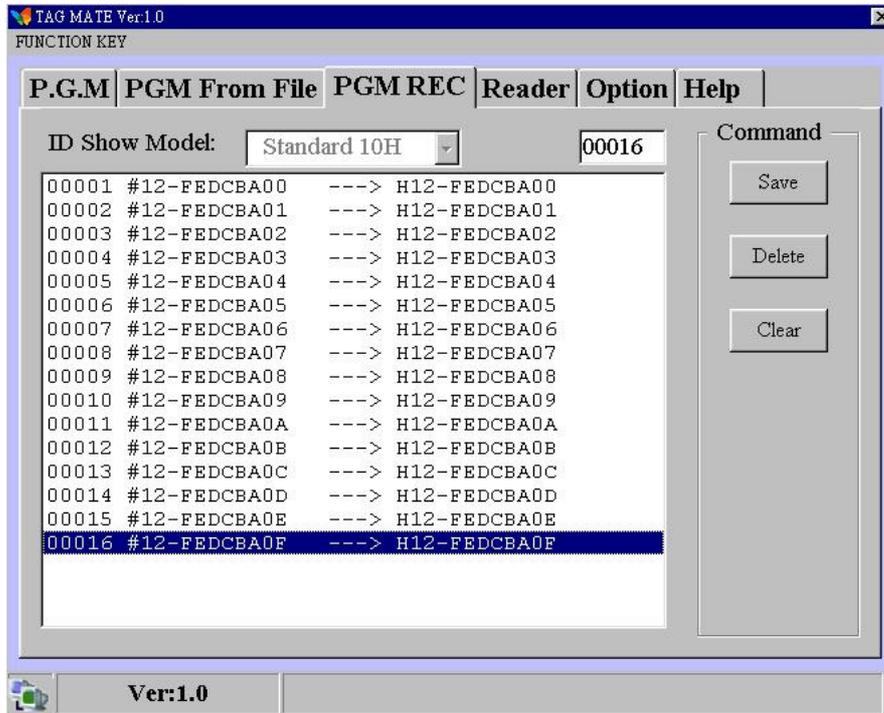

Reader

Save – Save the data

Delete – Delete the data

Clear – Clear the data

